


# HWEA (Hard Wire Exit Alarm)

## Installation Instruction and Wiring Diagram

D-5483-B

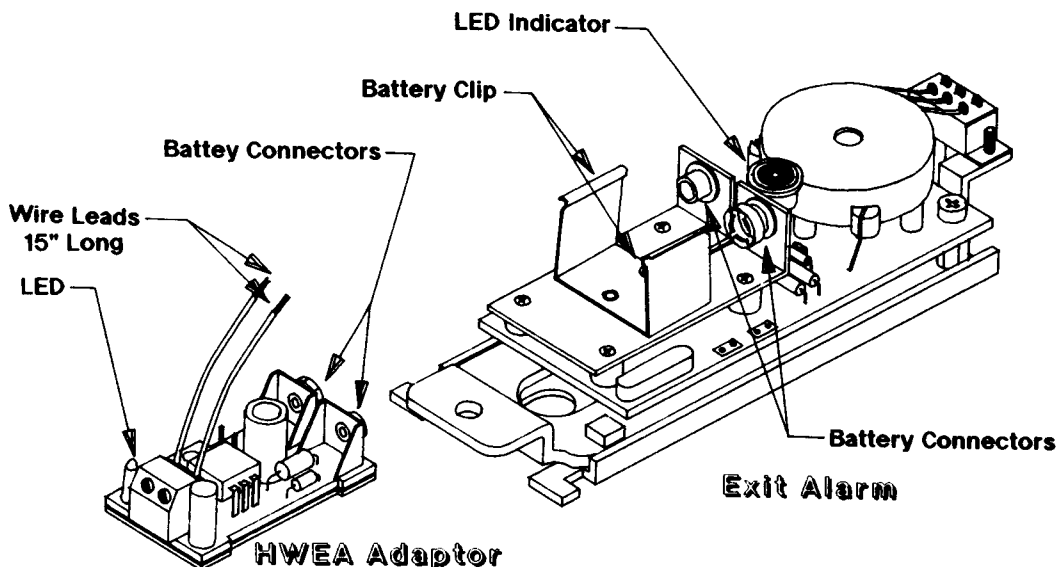

**Step 1** If HWEA is factory ordered with device proceed to Step #4-#6.  
If HWEAK is ordered proceed to Step #4-#6. If HWEA adaptor is ordered, independent from alarm unit proceed to Step #2-#6.  
Refer to exit alarm instruction D-5155 for all applications.

**Step 2** Use thumb and index finger to spread open battery clip.

**Step 3** Use other hand to slide HWEA adaptor between clips into battery connectors. Press firmly until connectors fully seated.

**Step 4** Install exit alarm into device channel. Refer to exit alarm instructions D-5155.


**Step 5** Wire HWEA as diagram below indicates.

**Step 6** Unit requires 24 volts AC/DC into unit wire leads. When power is on HWEA adaptor LED will be on (Green).

**Note:**

**Step 1** When HWEA exit alarm is turned on LED indicator (on alarm unit) will flash (Green) once every second.

**Step 2** When HWEA adaptor is supplied for an existing exit alarm, LED indicator (on alarm unit) will flash (green) once every 30 seconds.

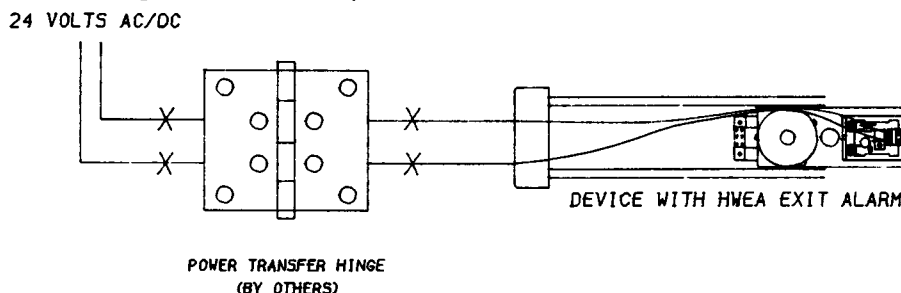

ALLEGION

© Allegion 2015  
Printed in U.S.A.  
D-5483 Rev. 05/15-b

**FALCON®**

TITLE: **HWEA (Hard Wire Exit Alarm)  
Installation Instruction and  
Wiring Diagram**

DATE: **05-29-2015**

**D-5483-B**