


FALCON®

SPECIAL INSTRUCTIONS FOR X571 LOCK WITH INTERCHANGEABLE CORE TO CORRECT OUT OF TIME CONDITION

BUTTON DOES NOT OPERATE...
OR KEY WILL NOT ROTATE CLOCKWISE...
THEN THE DOGGING BAR IS OUT OF "TIMING"

TO CORRECT—

1. TAKE OFF INNER KNOB AND ROSE, AND REMOVE LOCK FROM DOOR.
2. ON OUTSIDE KNOB REMOVE CORE, BACK OFF TAILPIECE ASS'Y UNTIL IT DISENGAGES FROM KNOB CATCH.
3. PLACE DOGGING BAR IN POSITION AS ILLUSTRATED BELOW. LOCK OUTER TRIM BY PUSHING IN PUSH BUTTON.

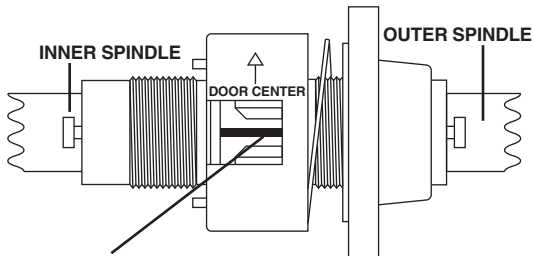

CORRECT POSITION OF DOGGING BAR.

NOTCH IN DOGGING BAR MUST POINT DOWN INTO LOCK.

4. ENGAGE TAILPIECE ASSEMBLY AND INSERT CORE.
5. RE-INSTALL LOCK ON DOOR.


FALCON®

SPECIAL INSTRUCTIONS FOR X571 LOCK TO CORRECT OUT OF TIME CONDITION

BUTTON DOES NOT OPERATE...
OR KEY WILL NOT ROTATE CLOCKWISE...
THEN THE DOGGING BAR IS OUT OF "TIMING"

**CARE MUST BE TAKEN NOT TO ROTATE EITHER
KNOB SPINDLE WHEN CYLINDER HAS BEEN REMOVED.
TO CORRECT—**

1. TAKE OFF INNER KNOB AND ROSE,
AND REMOVE LOCK FROM DOOR.
2. REMOVE OUTSIDE KNOB AND CYLINDER
ASSEMBLY.
3. PLACE DOGGING BAR IN POSITION AS
ILLUSTRATED BELOW.
4. LOCK MUST BE IN THE UNLOCKED POSITION
BEFORE KNOB IS INSTALLED.

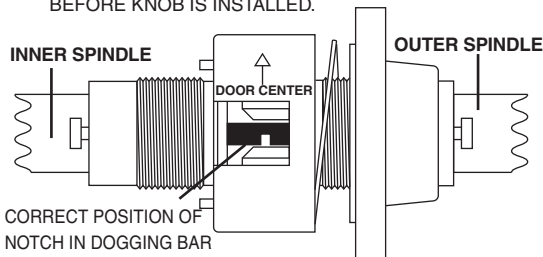

5. REPLACE OUTER KNOB AND CYLINDER ASSEMBLY
PER INSTRUCTIONS PACKAGED WITH LOCK.
6. INSTALL LOCK ON DOOR.

©2015 Allegion
Printed in U.S.A
002376-000-70 Rev. 05/15-d

