



### Terminal Block Connection Details 17036

Terminal	Description
PWR+	(Input) Positive connection to 12 Vdc or 24 Vdc power supply
PWR-	(Input) Negative connection to power supply (common)
FIR+	(Input) Fire alarm panel connection to release lock during an alarm (open to unlock)
FIR-	(Input) Fire alarm connection return (common)
LOK+	(Input) External lock command (close to lock)
LOK-	(Input) External lock command return (common)
EGR+	(Input/output) External egress command (close to start egress cycle). Also used as an input/output for connecting two locks together so they operate in unison.
EGR-	(Input/output) External egress command return (common)
ALRM	(output) Dry contacts that operate during any off-normal condition. Internal jumper selects NO or NC.
ALRM	(output) Other half of above contact
STAT	(output) Dry contacts that close whenever the magnet is energized
STAT	(output) Other half of above contact
<b>Auxiliary Magnetic Door Position Switch Terminals</b>	
A	Switch 2, Connection 1
B	Switch 2, Connection 2
C	Switch 1, Connection 1
D	Switch 1, Connection 2