




P513-860

AL-Series SFIC Spacers

Install SPACER(s)

- If needed, remove core with control key.
- Loosely place one spacer on tip of flat-head screwdriver.
- Use screwdriver to slide spacer through lever and onto driver.
- Repeat until specified number of spacers are in place. (See chart)

		Number of Spacers	
Lock	Lever Design	6-Pin	7-Pin
AL-Series	SAT (Saturn)	2	1

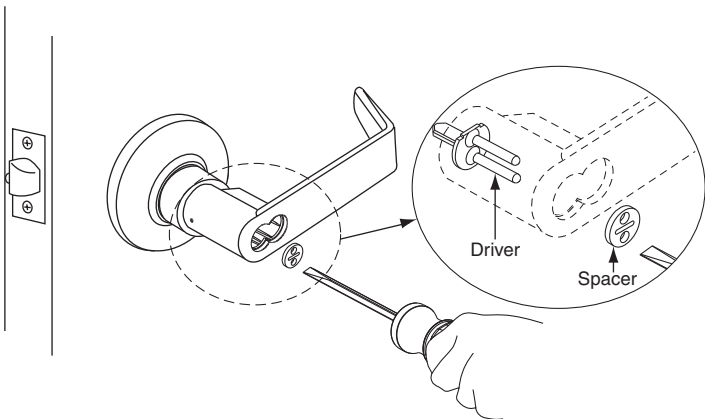

Customer Service

1-877-671-7011

www.allegion.com

© Allegion 2014
Printed in U.S.A.
P513-860 Rev. 01/14-d