


XX500G, XX625G, XX750G, XX875G, & XX1000G

Thru-bolted Lites

For 1-3/4" Doors and Variable Glass Thickness



Installation Instructions

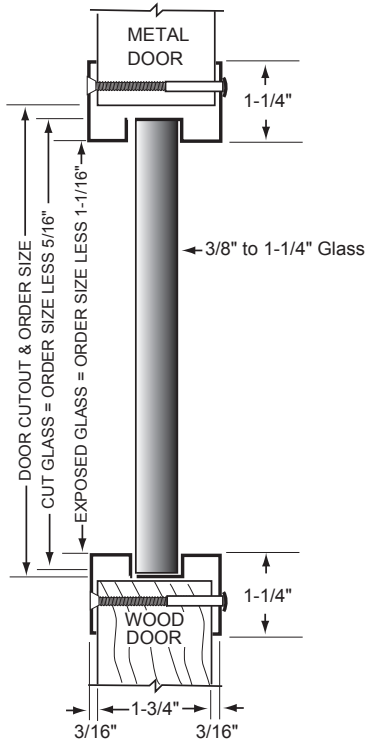

Installation Instructions

1. Cut out door in accordance with door manufacturer's listing procedure. Steel fire-rated doors do NOT require an opening reinforcing channel or reinforcing clips.
 2. Install glass & glazing material (sold separately), into lite kit.
 3. Position outer frame in-door cut-out.
 4. Position inner frame and insert start all screws before fully tightening.
 5. Tighten thru-bolts using a crisscross pattern. Use caution when using power screw-driving equipment to avoid stripping the material.
- ① **FIELD PAINTING:** For best results, scuff with a Scotch-brite pad prior to painting.

Customer Service

1-877-671-7011

us.allegion.com



© Allegion 2016
111404 Rev. 9/16-a