




D-2118

Trim for (F)18 and (F)XX Series Devices

811K

FALCON

Installation Instructions

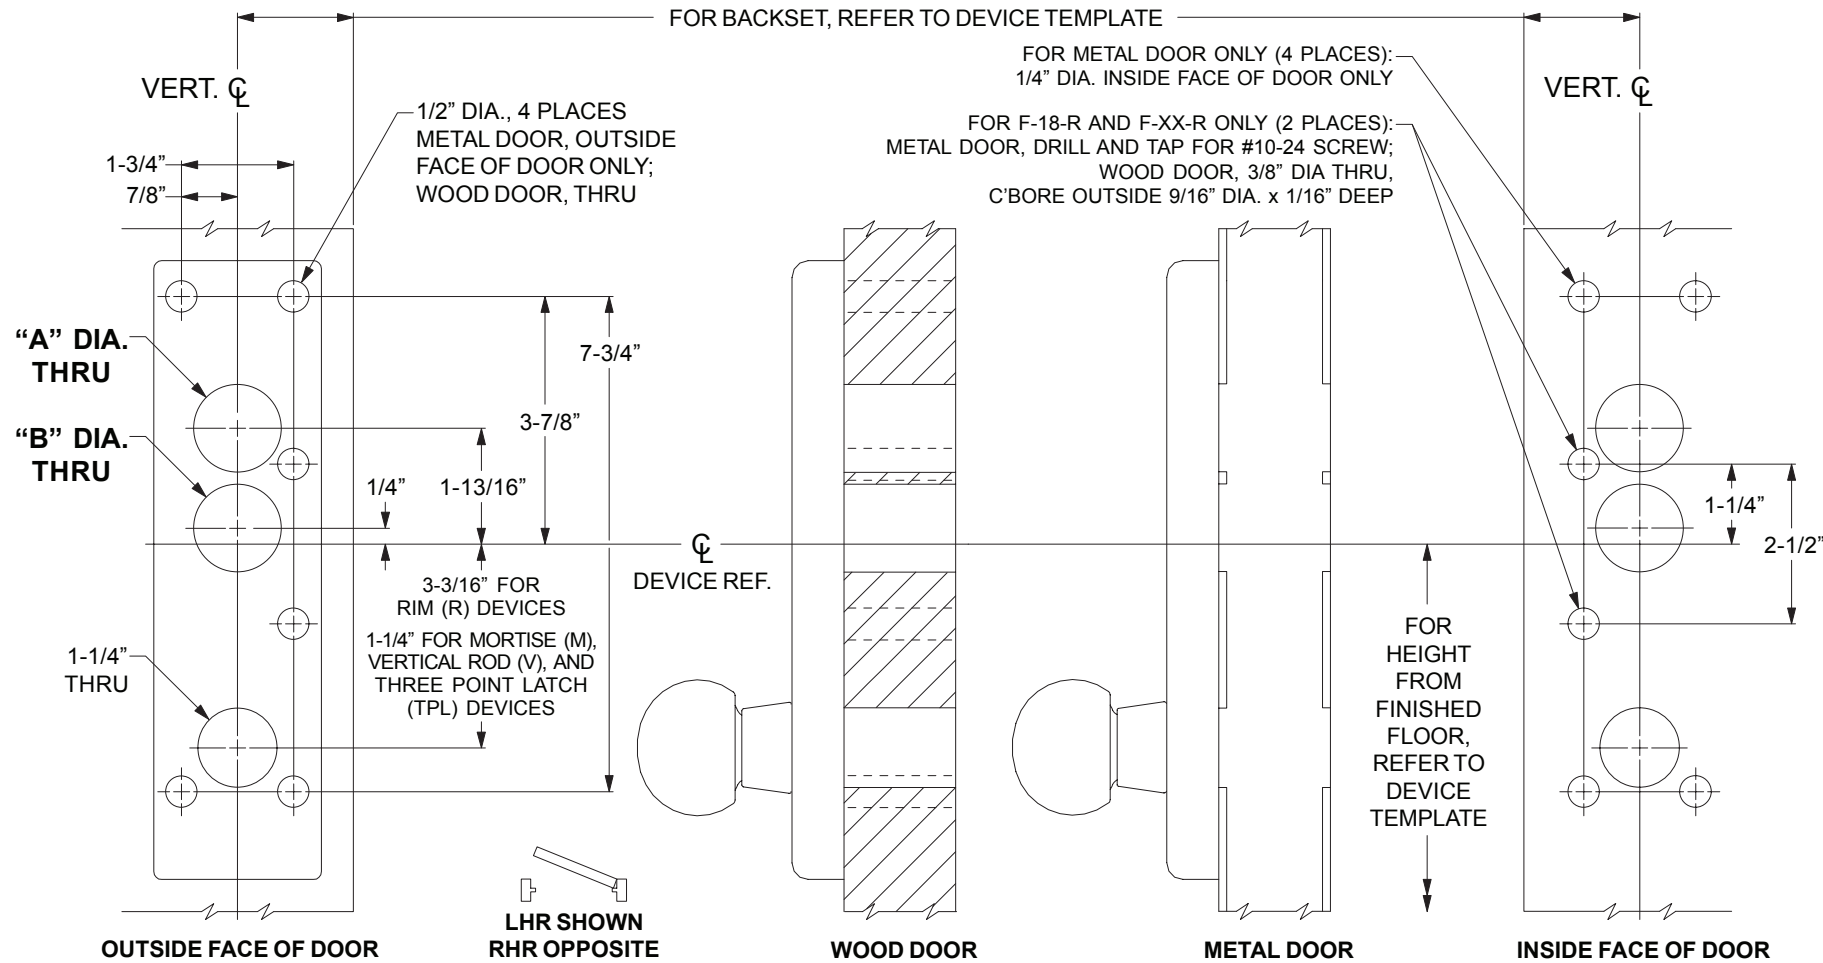

- PREPARE INSIDE FACE OF DOOR FOR DEVICE. SEE DEVICE DIRECTIONS FOR VERT. AND DEVICE REF. CENTER LINE LOCATIONS.
- PREPARE OUTSIDE FACE OF DOOR FOR TRIM:
 - TRANSFER VERT. AND DEVICE REF. CENTER LINES FROM INSIDE FACE TO OUTSIDE FACE OF DOOR. BE SURE VERT. CENTER LINE IS PARALLEL TO EDGE OF DOOR.
 - LOCATE AND PREPARE ALL HOLES AS INDICATED.
- INSTALL TRIM ON DOOR AND CUT KNOB SPINDLE TO SIZE:
 - TRIM MOUNTING: FOUR STUDS ARE THRU-BOLTED TO DEVICE WHEN DEVICE IS INSTALLED.
NOTE: FOR F-18-R AND F-XX-R DEVICES ON WOOD DOOR, INSERT SEX BOLTS INTO TWO HOLES PRIOR TO INSTALLING TRIM.
 - CUT KNOB SPINDLE:
 - VERTICAL AND THREE POINT LATCH: KNOB SPINDLE TO EXTEND 5/8" TO 3/4" BEYOND DOOR SKIN.
 - MORTISE: KNOB SPINDLE TO BE INSIDE DOOR SKIN BY 1/2".
- ASSEMBLE CYLINDER, IF REQUIRED.
 - IF USING MORTISE CYLINDER, INSTALL CYLINDER TO MORTISE LOCK.
 - IF USING RIM CYLINDER, CUT TAILPIECE TO EXTEND 3/8" BEYOND INSIDE FACE OF DOOR.
- INSTALL DEVICE ON DOOR PER DEVICE INSTRUCTIONS.

"A" = 1-3/8" "B" = OMIT				"A" = OMIT "B" = OMIT				"A" = OMIT "B" = 1-3/8"		"A" = 1-3/8" "B" = 1-3/8"	
(F-)XX-R-P x K DT	(F-)XX-M-K2	(F-)18-R-P x K DT	(F-)18-M-K2	(F-)XX-R-K (LS/LK)	(F-)XX-V-K (LS/LK)	(F-)18-R-K (LS/LK)	(F-)18-V-K (LS/LK)	(F-)XX-R-K			
(F-)XX-R-K2	(F-)XX-V-K	(F-)18-R-K2	(F-)18-V-K	(F-)XX-R-K DT	(F-)XX-V-K DT	(F-)18-R-K DT	(F-)18-V-K DT	(F-)XX-R-K (NL)		(F-)XX-R-K (2O.C.)	
(F-)XX-M-K	(F-)XX-V-K (NL)	(F-)18-M-K	(F-)18-V-K (NL)	(F-)XX-M-K (LS/LK)	(F-)XX-TPL-K (LS/LK)	(F-)18-M-K (LS/LK)	(F-)18-TPL-K (LS/LK)	(F-)18-R-K		(F-)18-R-K (2O.C.)	
(F-)XX-M-K (NL)	(F-)XX-TPL-K	(F-)18-M-K (NL)	(F-)18-TPL-K	(F-)XX-M-K DT	(F-)XX-TPL-K DT	(F-)18-M-K DT	(F-)18-TPL-K DT	(F-)18-R-K (NL)			
(F-)XX-M-P x K DT	(F-)XX-TPL-K (NL)	(F-)18-M-P x K DT	(F-)18-TPL-K (NL)								

Customer Service
1-877-671-7011 www.allegion.com/us

