


# 24-C Concealed Vertical Rod Centerslide Preparation

No Metal Channel - Top Latch Reinforcing Plates Construction - Wood Door,  
LHR Shown, RHR Opposite

## Device Side Prep when using

### 711 / 712 / 717 / 718 Trim

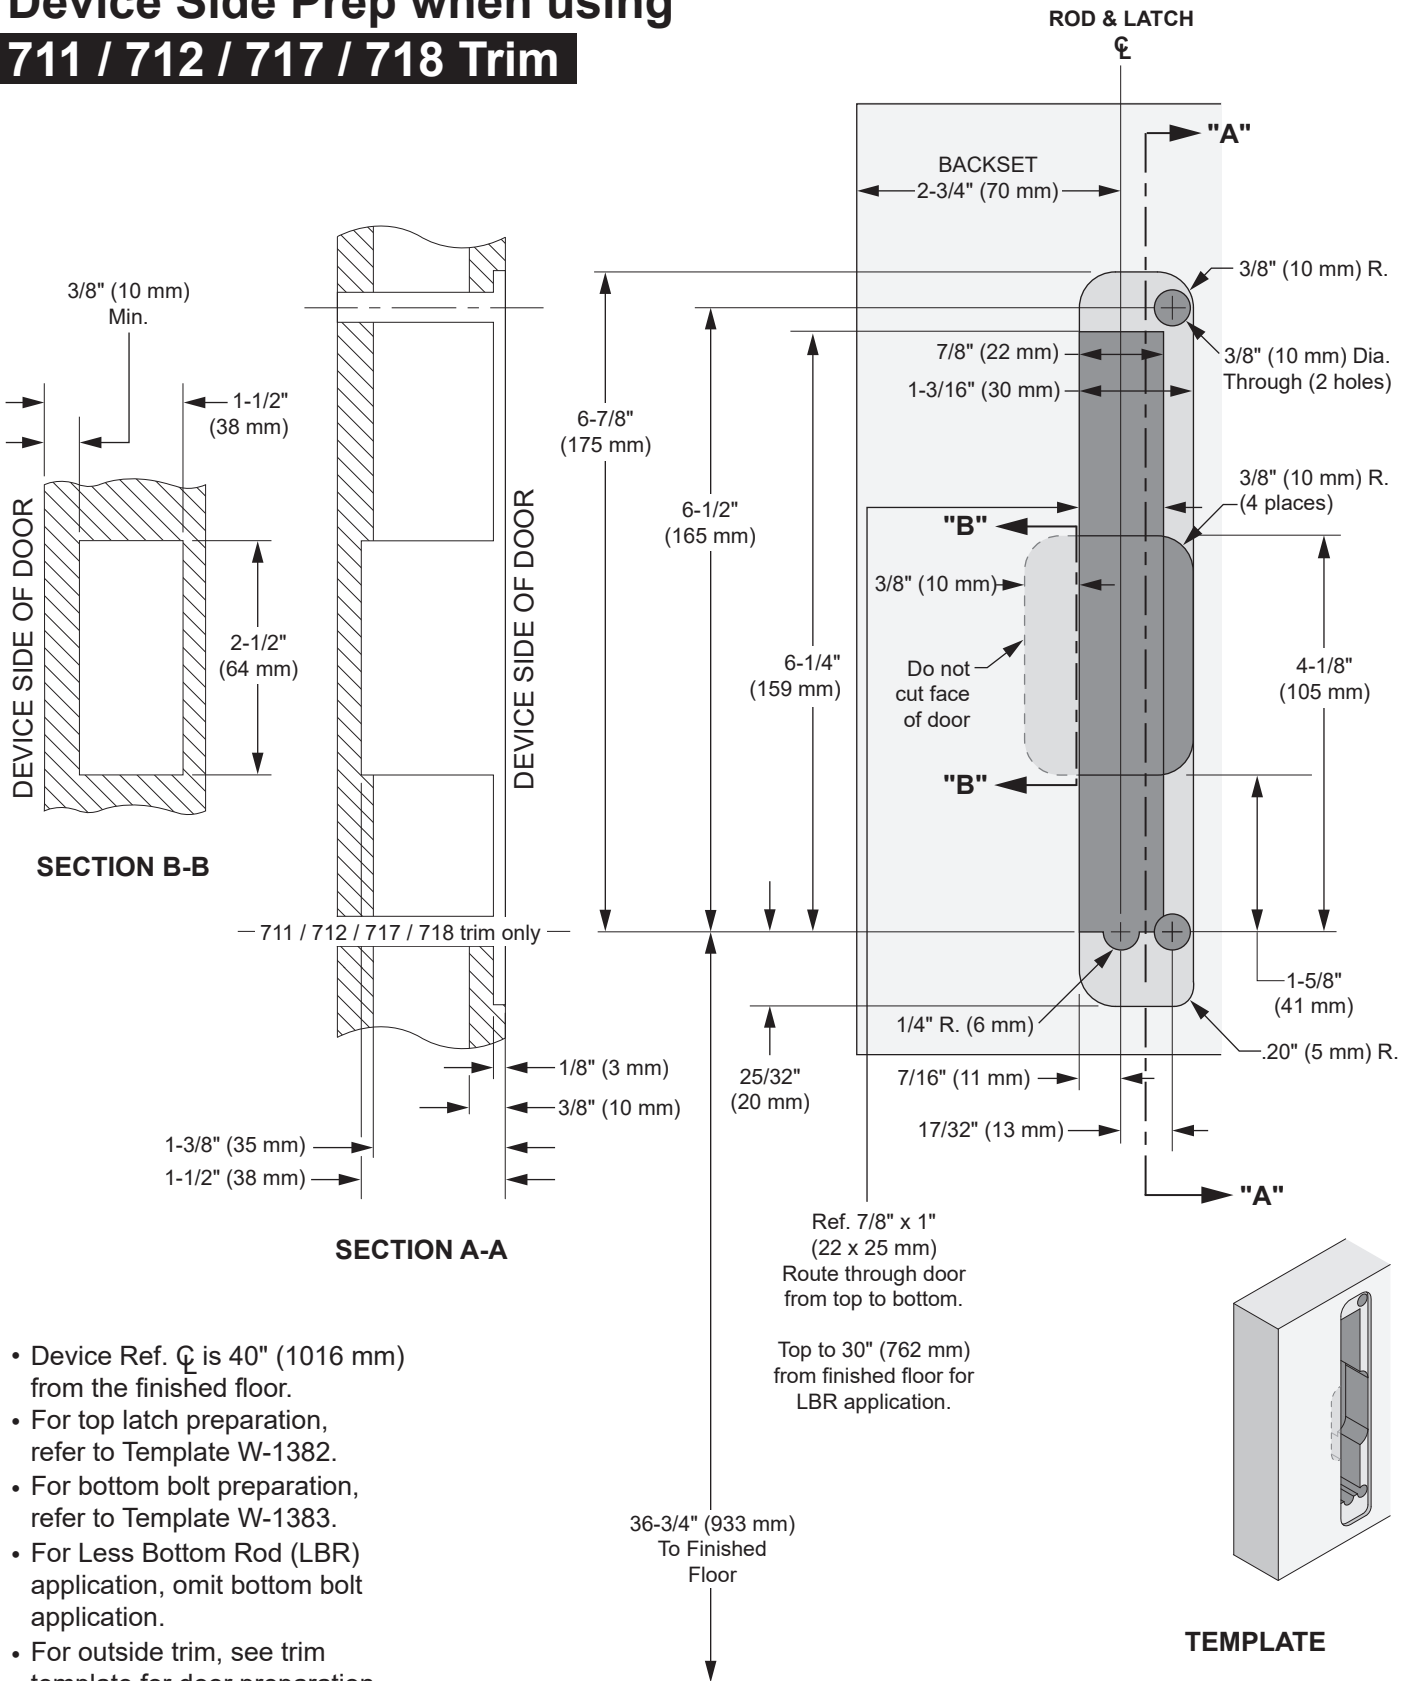

- Device Ref.  $\varnothing$  is 40" (1016 mm) from the finished floor.
- For top latch preparation, refer to Template W-1382.
- For bottom bolt preparation, refer to Template W-1383.
- For Less Bottom Rod (LBR) application, omit bottom bolt application.
- For outside trim, see trim template for door preparation.