


Strikes

10-087, Q330-148, Q001-047, A21315, A12316, A21317, 020568, 020569, 020318, 020319, 5161, 5164

Jamb Type: Wood
Style: Square Corner, ANSI and Mortise
Standard for: B-Series | K-Series | M-Series | RU-Series | T-Series | W-Series | X-Series
Optional for: D100/D200-Series | H-Series | Y-Series

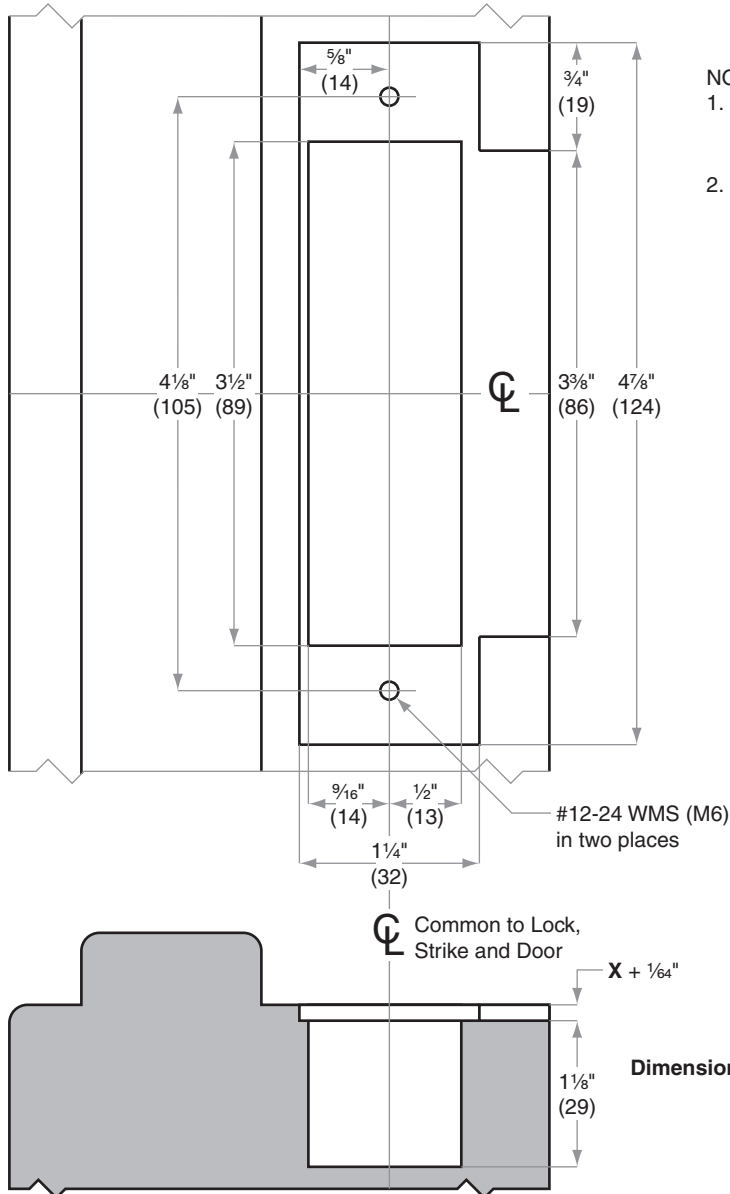

- NOTE:**
1. When reinforcement plate is specified, mortise additional 1/8" (3) to Dimension X
 2. Strike location on frames must be adjusted for thickness of door silencers when used

Dimension X: 10-025: 3/32" (2) when strike box not specified
 10-072 and 10-087: 5/32" (4) for strike box, detached

Dimensions shown in parentheses () are in millimeters.

Door preparation template