

**DOOR KNOCKER**


FOR USE ON EXTERIOR OR INTERIOR DOORS OF HOMES, CONDOMINIUMS, APARTMENTS AND OFFICES.

**INSTALLATION INSTRUCTIONS**

TOOLS REQUIRED: Drill, 3/8" drill bit, awl and screwdriver.

1. Position template (right) centered from side to side 60" above threshold. Tape template to outside of door.
2. Mark centers with awl (or nail) and drill holes with 3/8" drill bit completely through door.
3. Mount door knocker with screws and cover washers.


Note: Check product against template before installing.

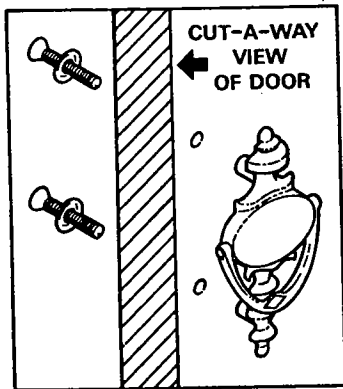

**MAINTENANCE INSTRUCTIONS**

H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES

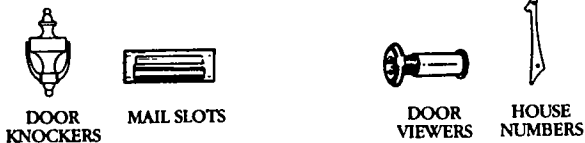


DOOR KNOCKERS

MAIL SLOTS

DOOR VIEWERS

HOUSE NUMBERS

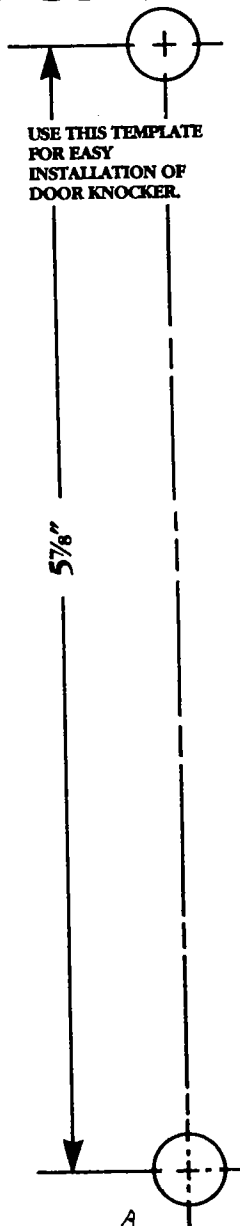

USE THIS TEMPLATE FOR EASY INSTALLATION OF DOOR KNOCKER.



DOOR KNOCKER C2-3101-605 BRT

MADE EXCLUSIVELY FOR H.B. IVES IN PORTUGAL

H.B. Ives. New Haven, CT. 06511