

FLOOR DOOR STOP

FOR USE ON WOOD OR CONCRETE FLOORS TO STOP DOOR AND PREVENT DAMAGE TO WALL, DOOR AND DOOR KNOB. FOR HEAVY DUTY DOORS UNDERCUT UP TO 2½".

INSTALLATION INSTRUCTIONS


TOOLS REQUIRED: Drill, ½" drill bit, Phillips screwdriver, awl or pencil.

FOR WOOD FLOOR APPLICATION:

1. Locate stop approximately 1" in from door edge and 4" from wall.

Note: Leave enough distance to prevent door knob from striking wall.

2. Mark holes, drill and secure.

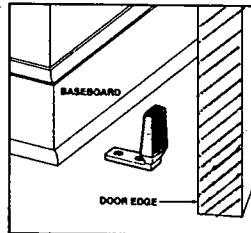

FOR CONCRETE FLOOR APPLICATION:

TOOLS REQUIRED: Drill, ½" carbide tip masonry bit, Phillips screwdriver, awl or pencil.

1. Follow instruction 1 above.
2. Mark holes, drill, insert plastic anchors and secure.

ASK FOR OTHER FINE HARDWARE BY H.B. IVES



WINDOW LOCKS



DOOR STOPS



COAT & HAT HOOKS



DOOR BOLTS



FLOOR DOOR STOP C434F2C ZINC
MADE IN U.S.A.