

FLOOR DOOR STOP

FOR USE ON FLOORS TO STOP DOOR AND PREVENT DAMAGE TO WALL, DOOR AND DOOR KNOB.


INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, $\frac{1}{16}$ " and $\frac{3}{16}$ " drill bits, Phillips screwdriver, hammer, awl or pencil.

1. Open door into desired stop position.
2. Slide template under door and tape to floor.
3. Mark hole centers.
4. Drill stud hole approximately 1" deep with $\frac{3}{16}$ " drill bit. For wood floors, drill screw hole 1" deep with $\frac{1}{16}$ " drill bit. For concrete floors, drill screw hole 1" deep with $\frac{3}{16}$ " drill bit.
5. Secure stop into position. For concrete floors, insert plastic screw anchor before securing stop.

Note: Check product against template before installing.

← ALIGN DOOR ALONG THIS LINE

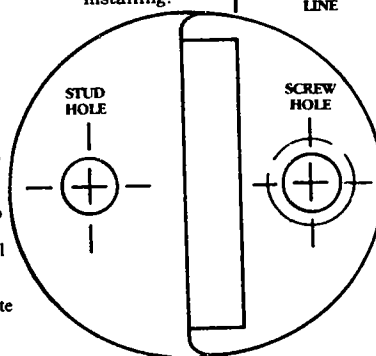

ASK FOR OTHER FINE HARDWARE BY H.B. IVES

