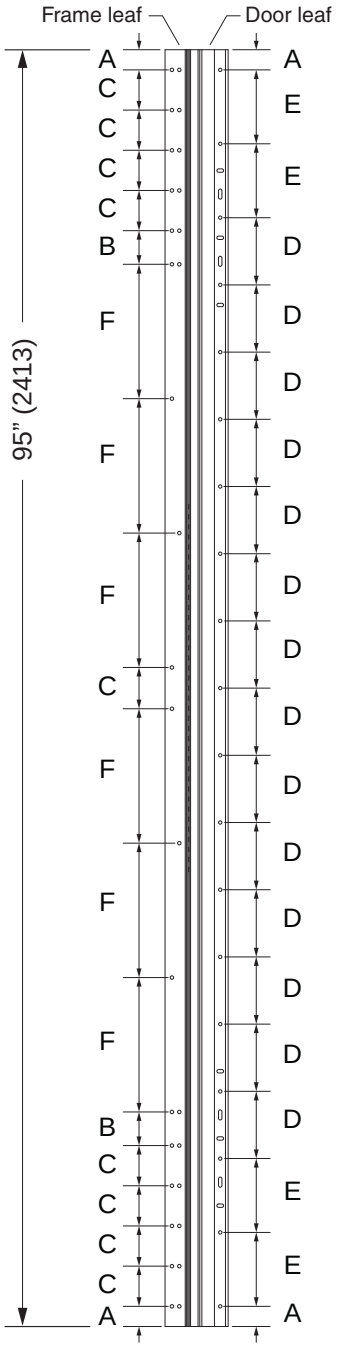

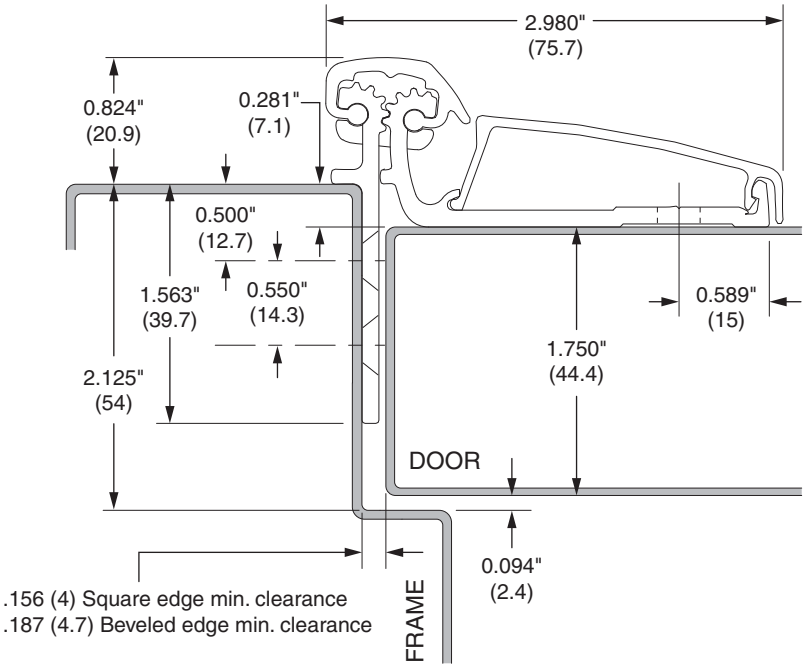

Total Door Undersizing

Single Square Edge Door - 15/32"
Single Bevel Edge Door - 1/2"
Pair of Doors, each leaf, Square Edge Door - 7/16"
Pair of Doors, each leaf, Bevel Edge Door - 15/32"

See installation instructions for reinforcement requirements.

Hole Preparation

Metal Frame:
#12-24 x 3/4" self-drilling tapping screws
#16 pilot drill is recommended for all holes

Wood Frame:
1/8" pilot drill

Vertical distance between holes

	A	B	C	D	E	F
Inch	1.50"	2.50"	3.00"	5.00"	5.50"	10.00"
mm	38.1	63.5	76.2	127	139.7	254

IVES

045XY 95" HALF SURFACE
NARROW FRAME
CONTINUOUS HINGE TEMPLATE

ALLEGION

NOTE: DIMENSIONS IN ( ) ARE IN MILLIMETERS

TEMPLATE NUMBER: 829726(A)

Date: 5-20-15