RX Wiring Kit

SCHLAGE

Installation Instructions

1 Route RX wires.

1a Route wires through channel beneath baseplate, as shown.

1b Trim the exit device RX wires as necessary and route up into center case area.
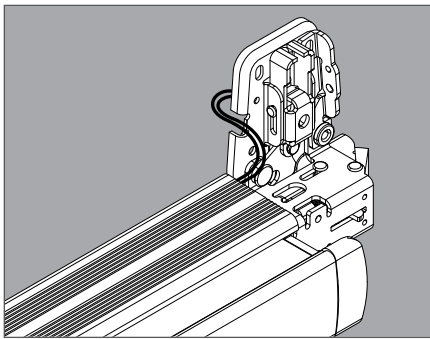
2 Connect wires and mount device.

2a Route the harness around the side of the center case.

2b Connect to the REX harness.

2c Make connections with provided Scotchlok connectors inside center case (color orientation does NOT matter)

REX harness
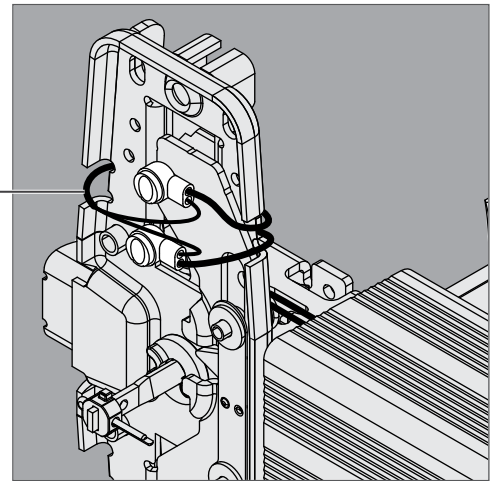
2d Finish mounting exit device.

ALLEGION